



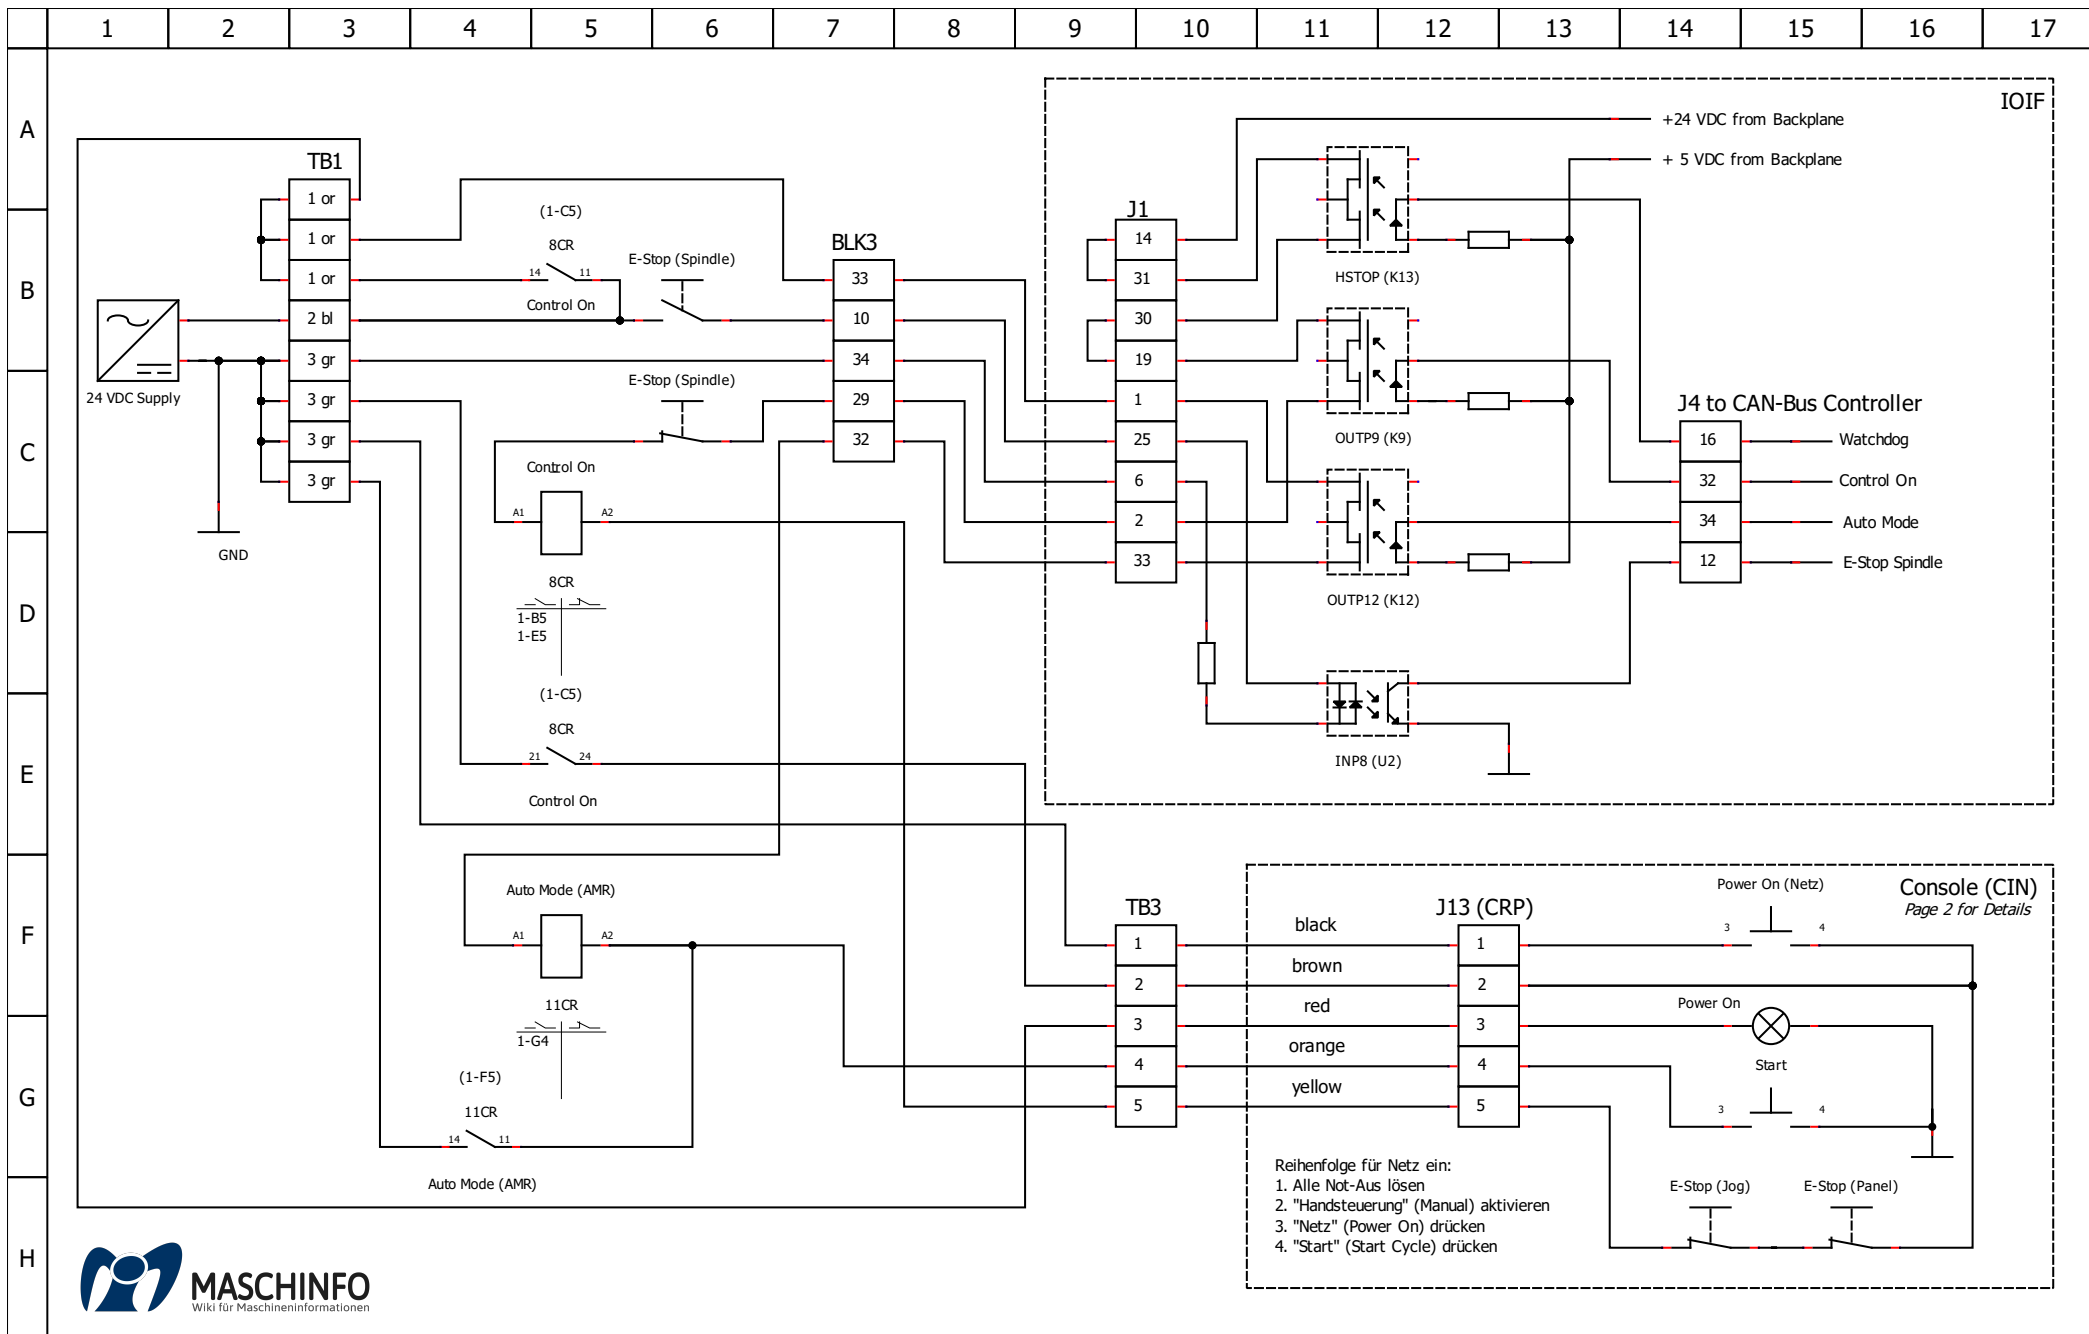


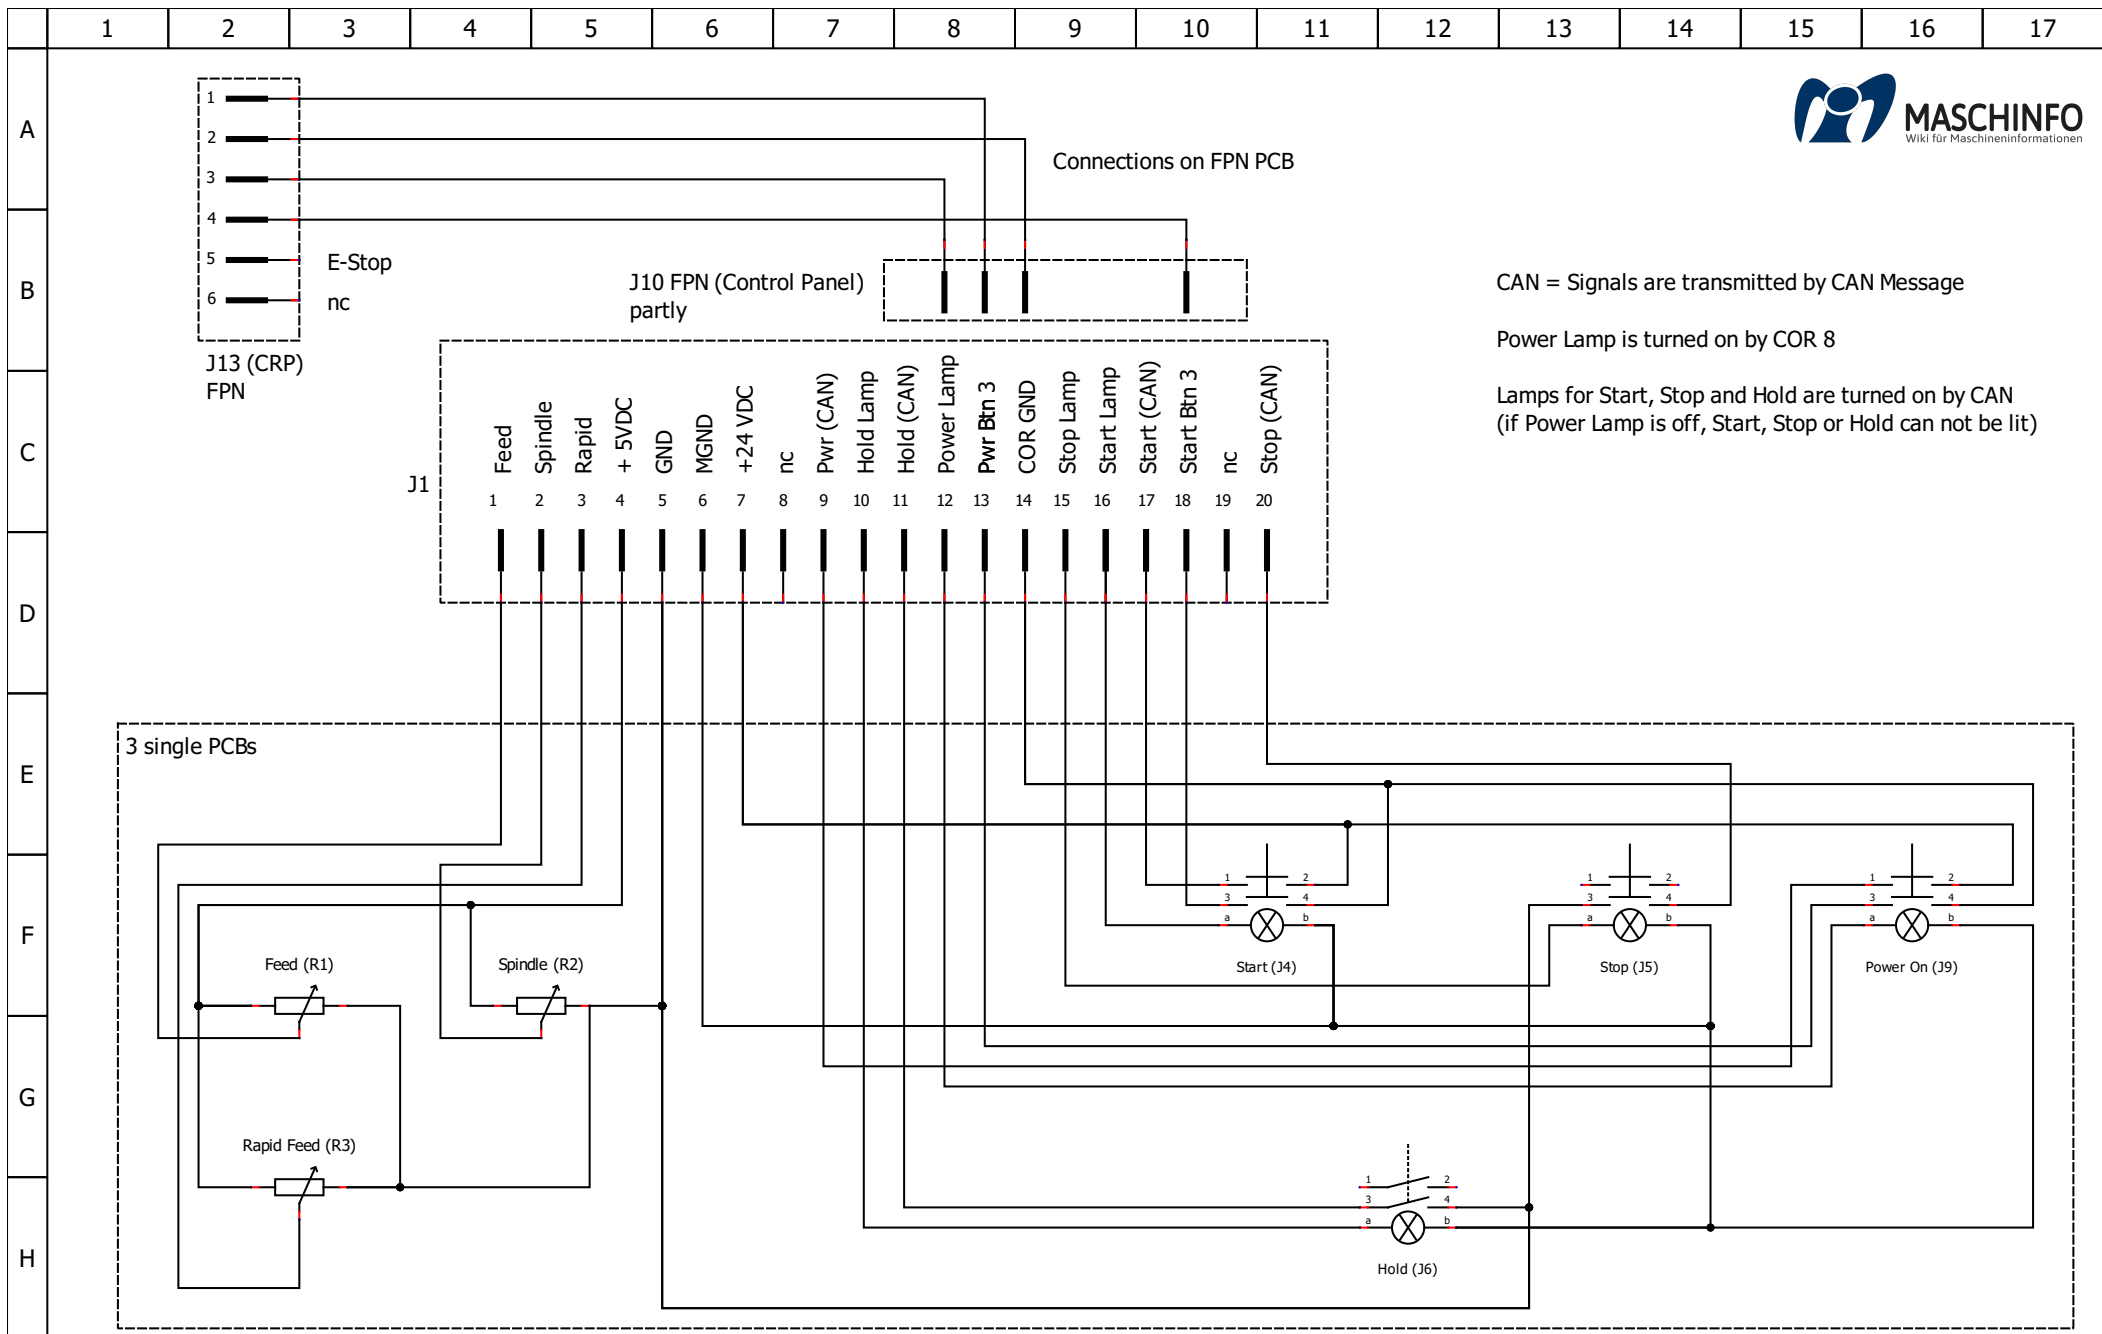

CAN = Signals are transmitted by CAN Message

Power Lamp is turned on by COR 8

Lamps for Start, Stop and Hold are turned on by CAN
(if Power Lamp is off, Start, Stop or Hold can not be lit)

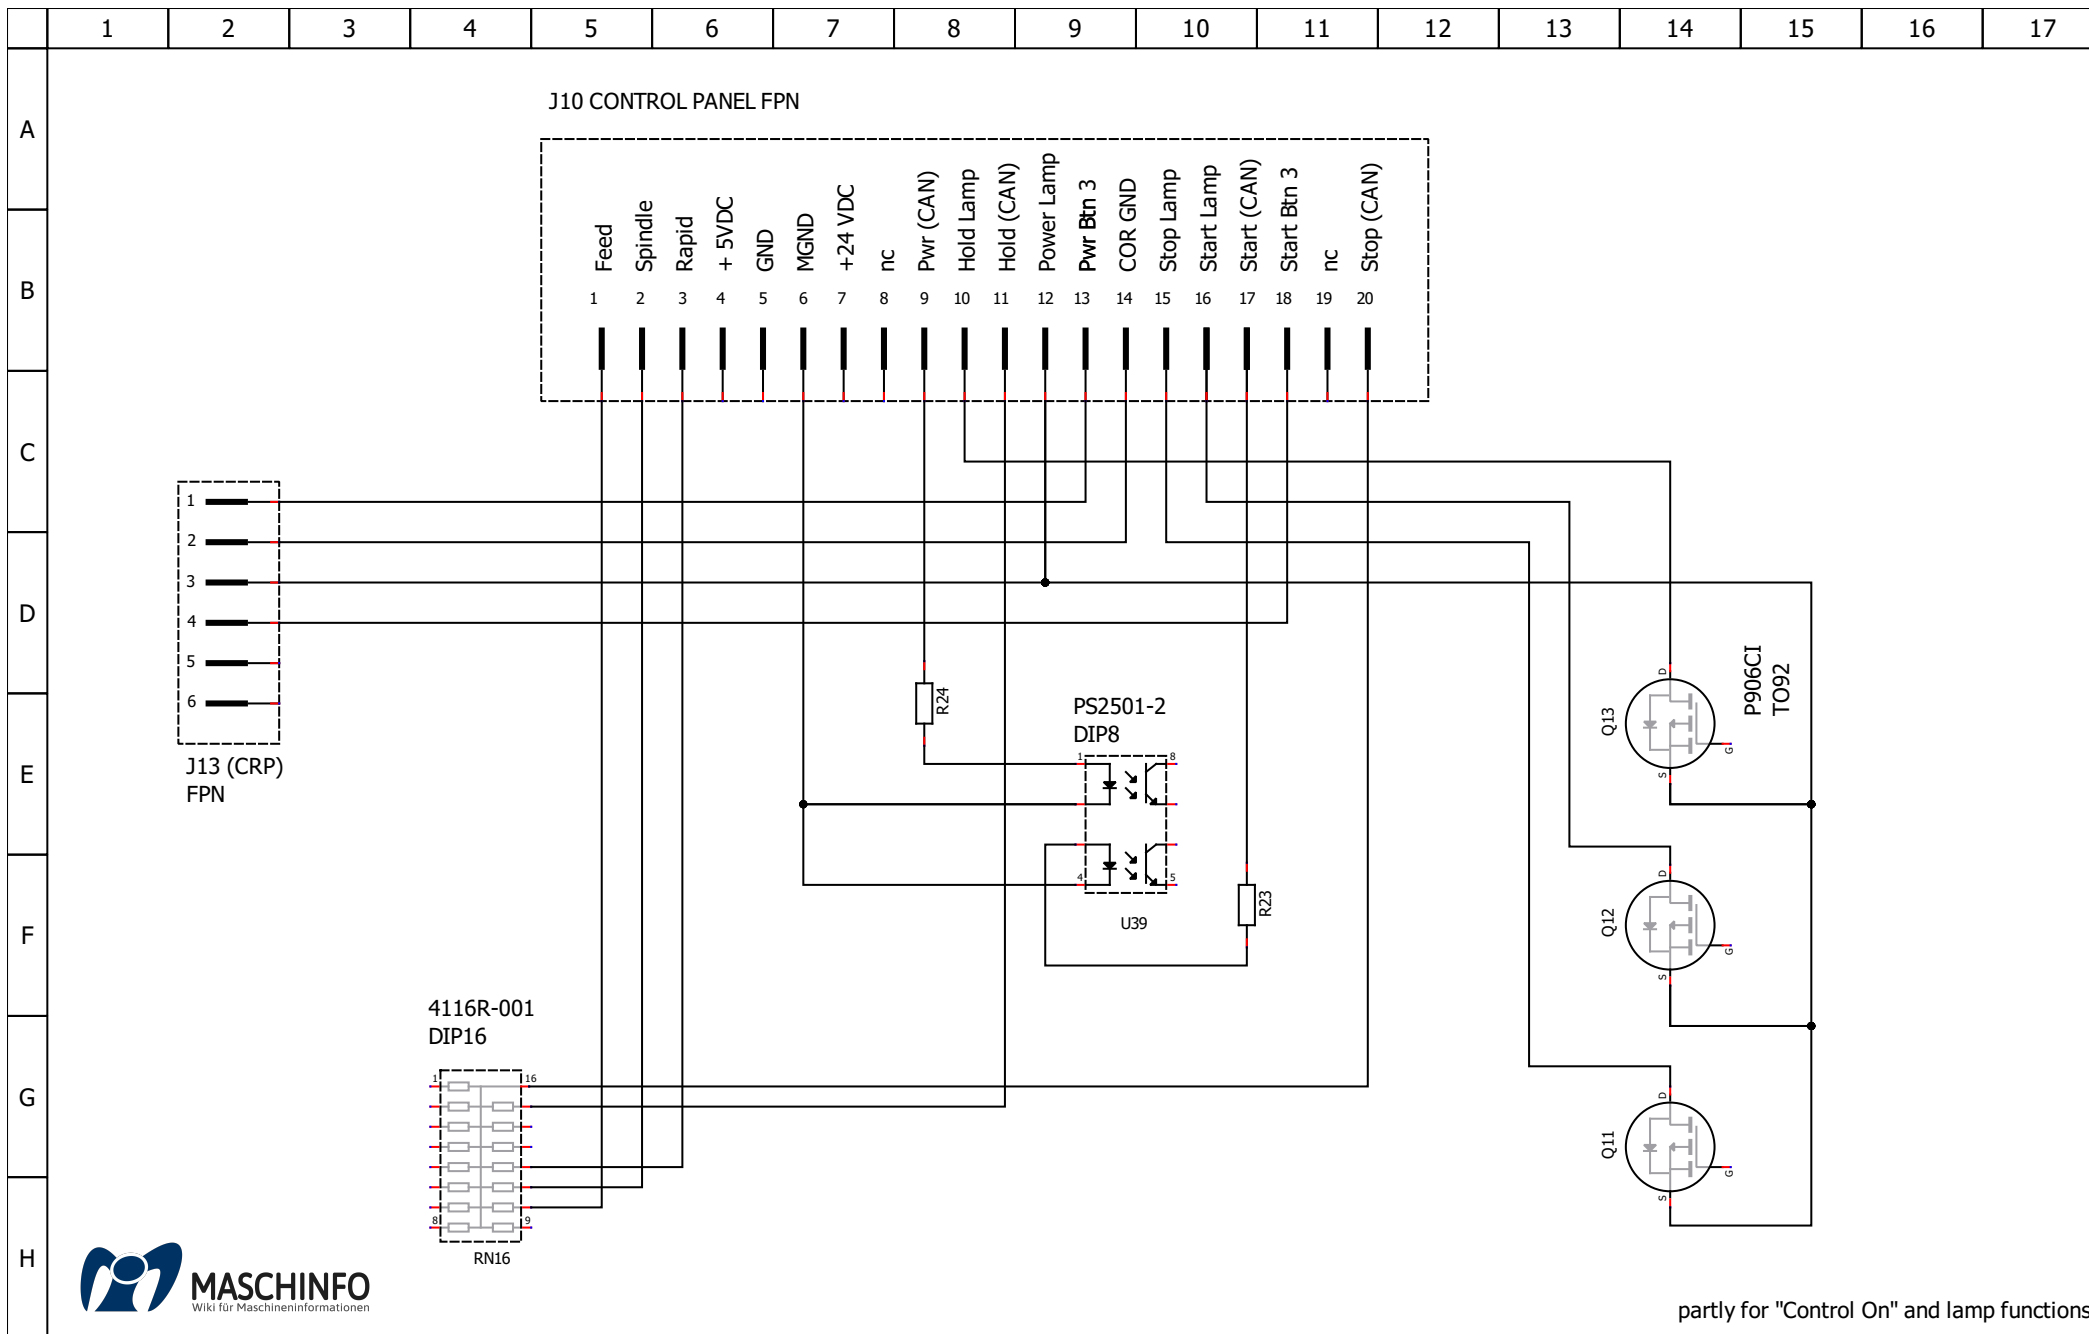

partly for "Control On" and lamp functions

Autor: Robert Hartmann

Datum: 21.01.2022

Hurco Flat Panel Node (FPN, CIN)

Datei:

Seite: 3/3